


Настройка очистки истории событий

Настройка автоматического очищения истории событий необходима только при автономной работе терминала во избежание переполнения памяти терминала.

При работе терминала под управлением ПО Biosmart-Studio v6 данная настройка не требуется, так как история событий автоматически удаляется из памяти терминала при ее передаче в ПО Biosmart-Studio v6.

Для настройки автоматического очищения истории событий нажмите **Настройки – Система** и перейдите в раздел **Удалять историю событий**.

Выберите из выпадающего списка давность событий, подлежащих удалению (**Старше недели** или **Старше месяца**).

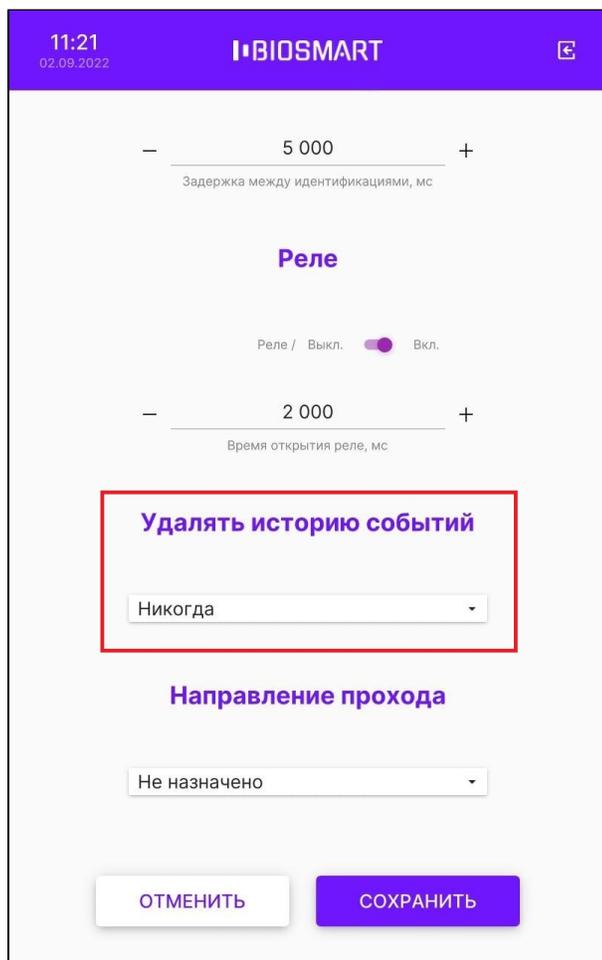

The screenshot shows the BIOSMART settings screen. At the top, the time is 11:21 and the date is 02.09.2022. The main title is "BIOSMART". Below the title, there are two numeric input fields: the first is set to 5 000 with the label "Задержка между идентификациями, мс", and the second is set to 2 000 with the label "Время открытия реле, мс". In the center, there is a section titled "Реле" with a toggle switch labeled "Реле / Выкл." and "Вкл.", which is currently turned on. Below the relay settings, there is a section titled "Удалять историю событий" (highlighted with a red box) with a dropdown menu currently set to "Никогда". At the bottom, there is a section titled "Направление прохода" with a dropdown menu set to "Не назначено". At the very bottom, there are two buttons: "ОТМЕНИТЬ" and "СОХРАНИТЬ".

Нажмите **СОХРАНИТЬ**.